

| Part No | Description | VH800 | VH1000 | VH1200 |
|----------------|-------------------------|--------------|---------------|---------------|
| 31A08 | Disc | ✓ | ✓ | ✓ |
| 31A13 | Ball Bearing Cover | ✓ | ✓ | ✓ |
| 31B02 | Friction Roller | ✓ | ✓ | ✓ |
| 31B07 | Spacer | ✓ | ✓ | ✓ |
| 31B09 | Spacer | ✓ | ✓ | ✓ |
| 31B21 | Splash Ring | ✓ | ✓ | ✓ |
| 31B23 | Upper Spring Seat | ✓ | ✓ | ✓ |
| 31B24 | Bushing | ✓ | ✓ | ✓ |
| 33A11 | Friction Disc | ✓ | ✓ | ✓ |
| 33A17 | Sliding Bush | ✓ | ✓ | ✓ |
| 34D50 | Shaft For Friction Disc | ✓ | ✓ | ✓ |
| 3Q96 | Guide Roller | ✓ | ✓ | ✓ |
| 45G80 | Disc | ✓ | ✓ | ✓ |